

# Washing Instructions

## Wash wisely



You can download the App from the App Store, Google Play or Huawei AppGallery

 
### Using the App



Download and open the Washstation App in your smart phone and create an account



You have the option to reserve a washer for 10 mins from anywhere

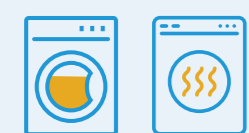

Choose washer or dryer



Option to add another machine (Yes/No)



Select cycle



Proceed with payment

### Using the machines



Load machine with washing – Max 3/4 full



If you are washing, add your detergent and close door



Press start on the machine




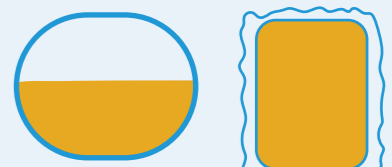 

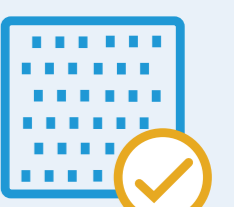 


You'll receive an email to notify you that the cycle is ending



Cycle finish (Wait 30 secs and unload)

## Laundry top tips

- Check all pockets before washing for any foreign objects 
- **Do not wash duvets or pillows**
- Do not over or under load the machines - Stay within the load level lines 
- Select the best wash and drying programme 
- Use a liquid pod or liquid detergent with a reusable dosing ball directly into drum - Making sure to keep the detergent within the ball 
- Make sure all clothes are clear of the door 
- Clean the lint filter before and after using the dryer 

Washstation Helpline 0800 141 2331  
[service@washstation.co.uk](mailto:service@washstation.co.uk)